


VICON SYSTEM: HOW TO LOAD STANDARD CONFIGURATION FILE


**Written by the Black Lab Committee
October 24, 2007**

DIRECTIONS:


1. Download the standard Vicon Tracking System configuration file from <http://blacklab.cs.vt.edu/> under the “Resources” section.
2. Launch the Vicon iQ application.
3. Under “Data Management,” open your database file and select the proper project/capture_day/session.

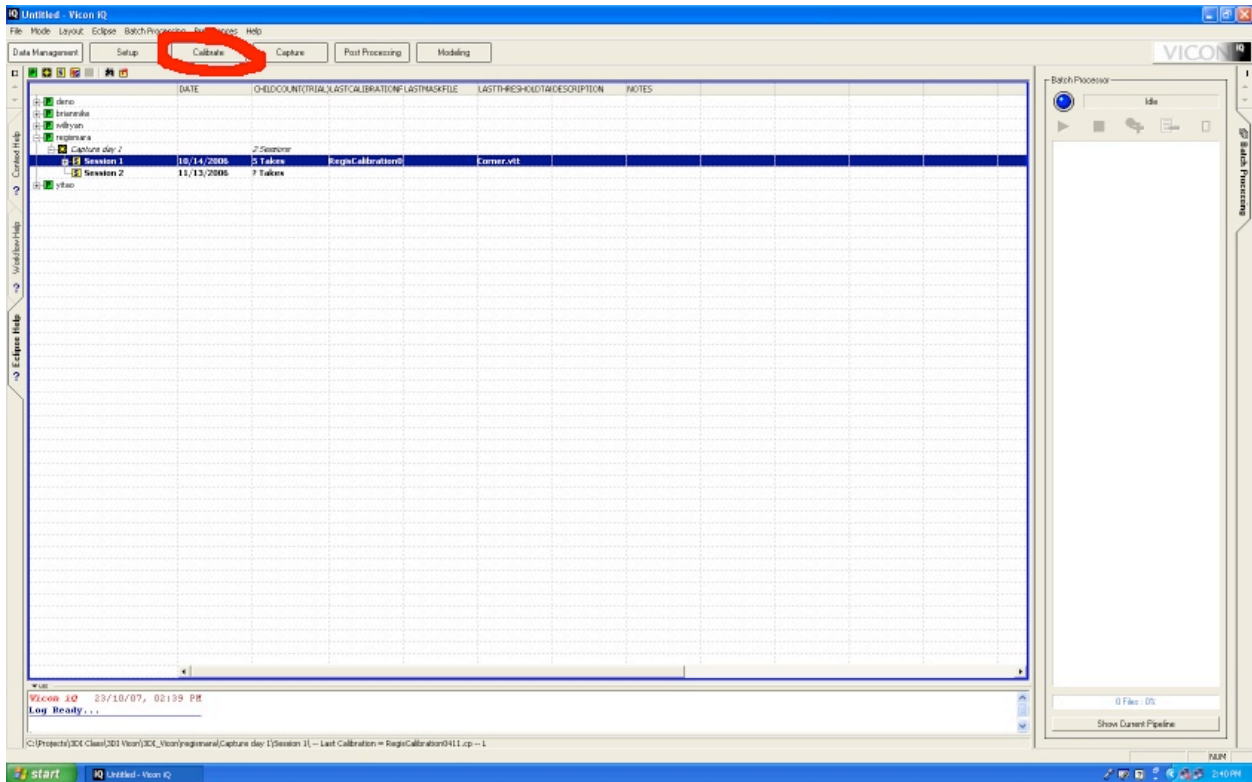

4. Under “Calibrate,” click on the “Load In Calibration” button located in the lower right of the screen.

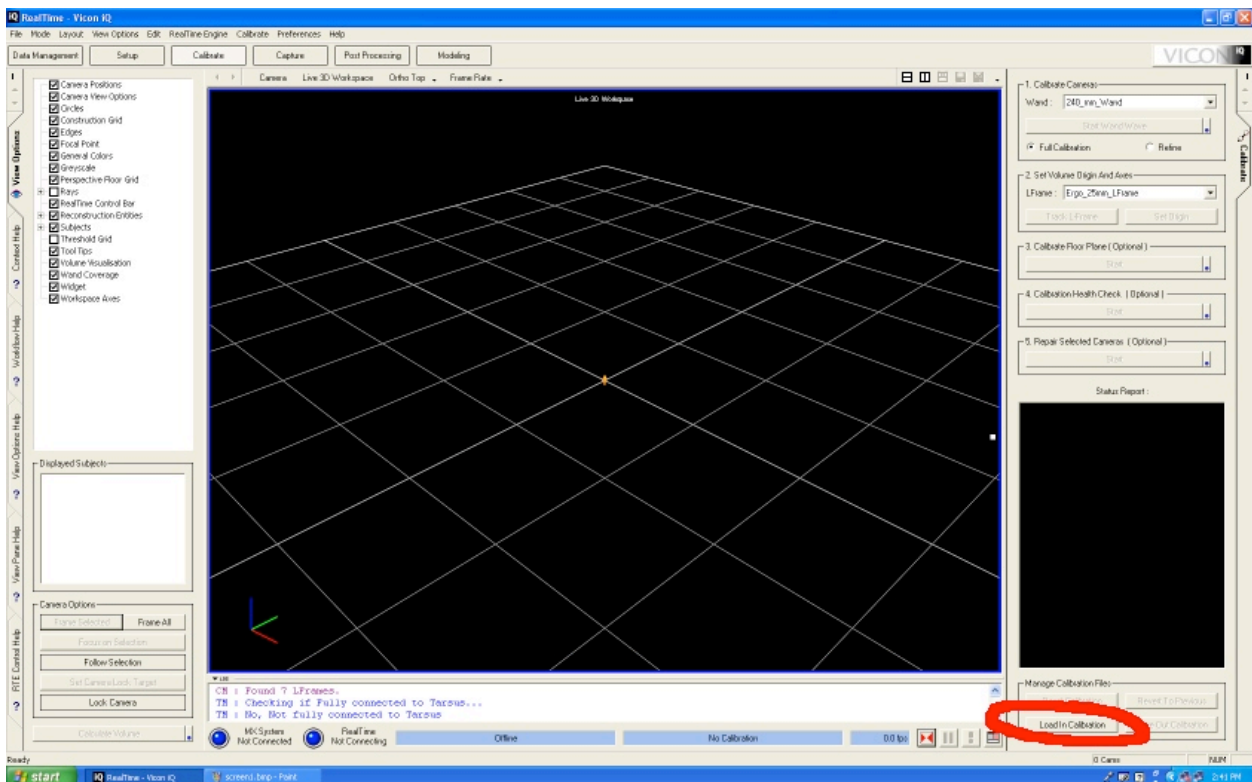

5. In the new window, select the standard configuration file you downloaded from the Black Lab website and click “Open.”

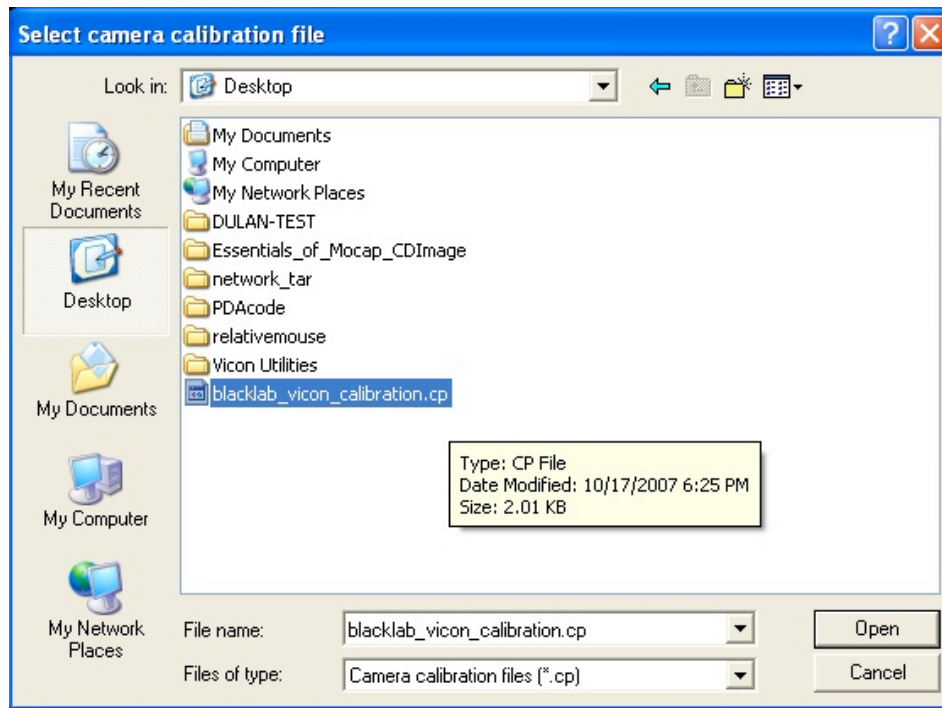

6. You should now see the current camera setup in the Vicon iQ application.

